


2021-2023 Ford F-150 3rd Brake Light Harness Installation Guide

Begin this installation by removing the plastic trims along the driver side floor board & up towards the rear of the headliner.

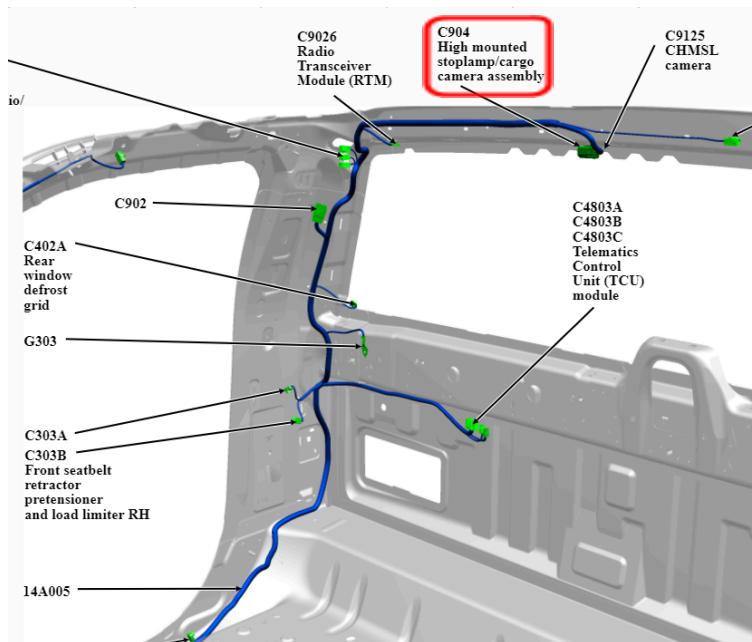


Locate & Disconnect the Third Brake Light(C904)

- Route the new harness from the third brake light(C904) down to the IPMA.
- Follow the driver side door well alongside the rear of the cab up to the third brake light.

Insert pins as followed into C904

Unlatch the white covering from the front of the connector and be sure to insert the pins into the rear of the connector.

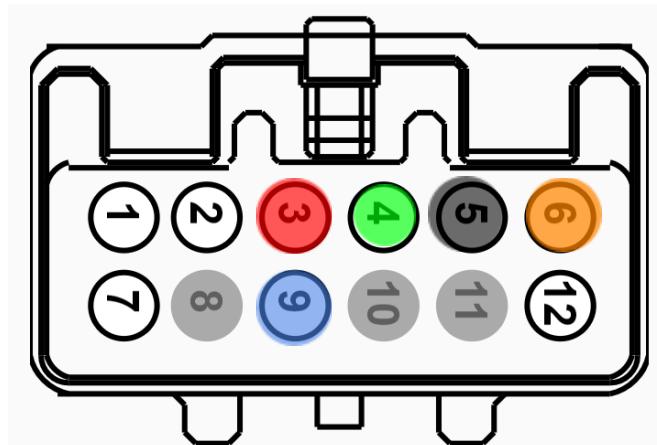

****IMAGE IS THE FRONT OF CONNECTOR****

PIN 3 (C904) → PIN 20 (C242C)


PIN 5 (C904) → PIN 10 (C242C)

PIN 4 (C904) → PIN 19 (C242C)

PIN 6 (C904) → TAP (P1 C242A)

PIN 9 (C904) → PIN 1 (C242B)


Locate the IPMA connectors. (C242A, C242B, C242C)

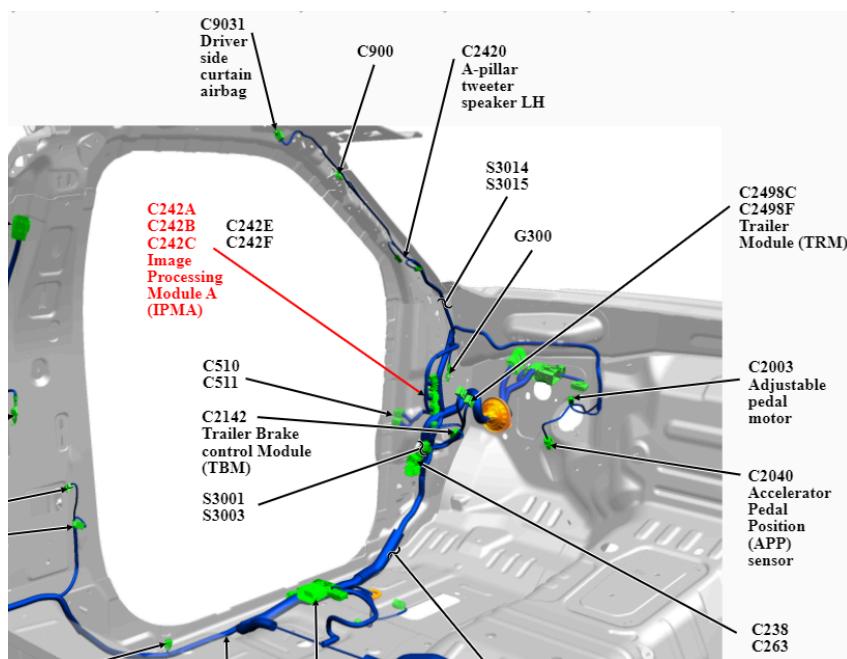


Begin to pin & tap the IPMA connectors. (C242A, C242B, C242C)

NOTE: Each connector(C242B & C242C) will have a tab on the front side of the connector that will need to be removed to push pins into the rear of the connector.

C242A (WIRE TAP THIS PIN)

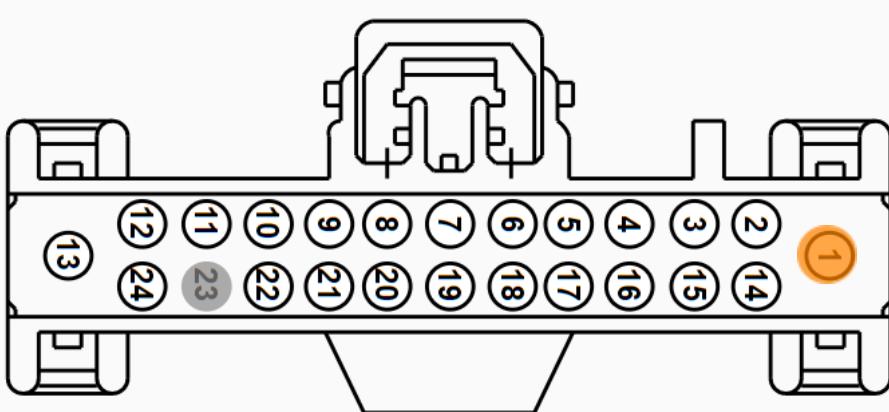

C242B

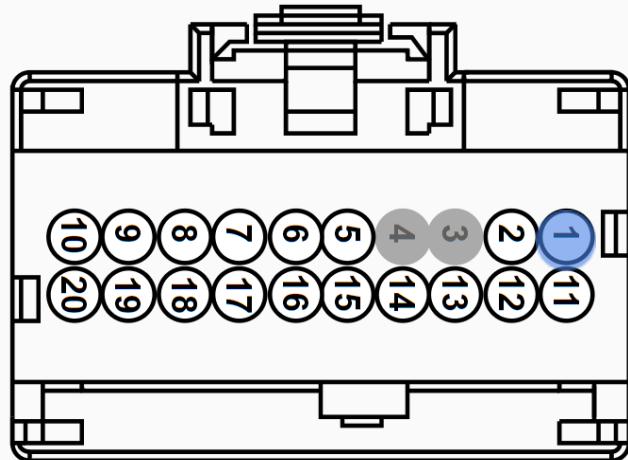

C242C

